

AV SERIES



Aristel 15 Button model Keyphone

15 BUTTON HANDSET USER GUIDE

Aristel networks

NOVEMBER 2001

Key Telephone User's Guide

Warning! The handset may pick up small metallic objects, such as staples, if placed face down on a surface that may contain these objects.

<u>Icons Used</u>	3
<u>01</u> Answering Calls	4
<u>02</u> Baby Monitoring Function	4
<u>03</u> Background Music	4
<u>04</u> Call Forward Function	4
<u>General Call Forward</u>	4
<u>Call Follow Me</u>	5
<u>05</u> Call Transfer Function	5
<u>Direct Transfer (Camp On)</u>	5
<u>Indirect Transfer</u>	5
<u>Quick Transfer</u>	5
<u>06</u> Change Intercom Call Signalling (Voice/Ring)	6
<u>07</u> Conference Function	6
<u>Three Party Conference</u>	6
<u>Unsupervised Conference</u>	6
<u>08</u> Date and Time setting	6
<u>09</u> Day/Night Transfer	7
<u>Auto/Manual Mode Switching</u> (Console Only Operation)	7
<u>Manual Night Switching</u> (Console Only Operation).....	7
<u>10</u> Do Not Disturb Function.....	7
<u>11</u> Door Phone Function.....	7
<u>Call Door Phone</u>	7
<u>Door Lock Release</u>	7
<u>12</u> Fire Alarm Off Function (Console Only Operation)	7
<u>13</u> Forced Account Code/s	7
<u>14</u> Non Forced Account Code/s.....	8
<u>15</u> Handsfree Function (Handsfree Only).....	8
<u>16</u> Hold Call Function.....	8
<u>Normal Call Hold</u>	8
<u>Exclusive Call Hold</u>	8
<u>Retrieve Normal Call From Hold</u>	8
<u>Retrieve Exclusive Call From Hold</u>	8
<u>17</u> Individual Alarm/Morning Call	9
<u>Individual Station Alarm</u>	9
<u>Own Station Alarm</u> (Not Available Non Display Models)	9
<u>18</u> Date/Time Setting (Console Only Operation)	10
<u>19</u> Intercom Call	10
<u>Normal Call</u>	10

	<u>Call Operator</u>	9
<u>20</u>	Lock/Unlock Your Phone	10
	<u>Lock/Unlock</u>	10
	<u>Temporary Unlock</u>	10
<u>21</u>	Message Text (Absent Message)	10
<u>22</u>	Mute Function	11
<u>23</u>	Outgoing Call	11
	<u>Individual CO Access</u>	11
	<u>Automatic CO Access</u>	11
<u>24</u>	Paging Function	11
	<u>General Paging</u>	11
	<u>Quick Paging</u>	12
	<u>Page Answering</u>	12
<u>25</u>	Pick Up Function	12
	<u>General Pick Up</u>	12
	<u>Quick Pick Up</u>	12
<u>26</u>	Re-dial Function	12
	Last Number Re-dial	12
<u>27</u>	Auto Re-dial Function	12
	<u>To Store Numbers</u>	12
	<u>Auto Re-try Of Busy Number</u>	13
	<u>To Auto Re-dial Stored Numbers</u>	13
<u>28</u>	Release The Call	13
	<u>With Handset</u>	13
	<u>Handsfree</u>	13
	<u>Flash Function</u> (For External Call Only)	13
<u>29</u>	Ring Volume Frequency	13
<u>30</u>	Speed Dial Function	14
	<u>System Speed Dial Programming</u> (Console Only Operation)	14
	<u>Personal Speed Dial Programming</u> (From Individual Handset)	14
	<u>System Speed Dial Operation</u>	15
	<u>Personal Name Speed Dialling</u>	15
	<u>Name Speed Dialling</u> (Console Only Operation)	15
<u>31</u>	Station Operation Help List (Display Phone Only)	15
<u>32</u>	Toll Code Password (Display Phone Only)	15
<u>33</u>	Volume Control Function	15
	<u>Dynamic Operation</u> - Volume	15
	<u>Static Operation</u> - Volume/Frequency	16
<u>34</u>	Power Fail warning notice	17

■ Icons Used:



: Press digit [1].



: Press digit [2].



: Press digit [3].



: Press digit [4].



: Press digit [5].



: Press digit [6].



: Press digit [7].



: Press digit [8].



: Press digit [9].



: Press digit [0].



: Press digit [*].



: Press digit [#].



: Enter numbers.



: Press [FUNC] key.



: Press [SPK] Button.



: Press [VOL] Key.



: Press [REDIAL] Button.



: Press [SPD] Key.



: Press [TRF/FL] Button.



: Press [HOLD] Key.



DSS FN: Press [DSS Function] Key.



CO. : Press [DSS CO line] Key



ST. : Press [DSS Station] Key.



AT/MIC :Microphone On/Off.



SAVE : Press [SAVE] Key.



 
FAC :Forced Account Code Key.



: Hang Up or On Hook.



: Station (Key Phone or SLT) during ringing.

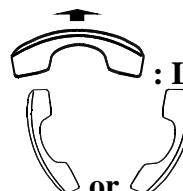





: Lift Handset or Off Hook.

or : During Conversation or on talking.

01 Answering Calls



    02 Baby Monitoring Function

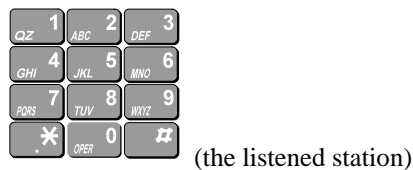


- Note:**
1. Once the function is enabled the monitoring station's microphone will be turned on. When it is called it will not ring but the calling station will hear any activity in the immediate area.
 2. The monitoring station's microphone is activated when the function is initiated.

03 Background Music



04 Call Forward Function

 Method 1: General Call Forward

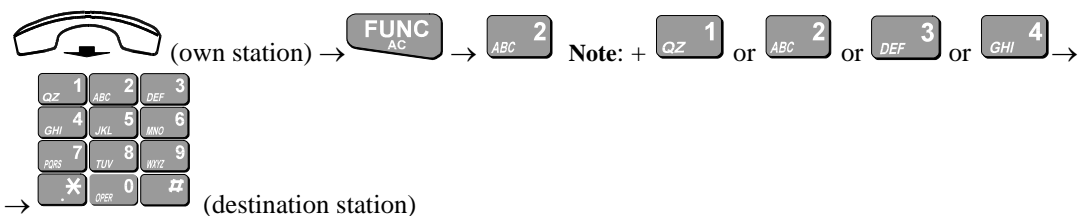


- Note:**
- | | |
|-------------------|--|
| [FUNC] [2] + [1]: | Calls Forward All. |
| [FUNC] [2] + [2]: | Call Forward Busy. |
| [FUNC] [2] + [3]: | Call Forward No Answer. |
| [FUNC] [2] + [4]: | Call Forward Busy No Answer. |
| [FUNC] [2] + [6]: | Call Forward All to External Individual Speed Dial Number. |

To cancel the function:


Repeat the same procedures but replace the destination station number with own station number.

 Method 2: Call Follow Me

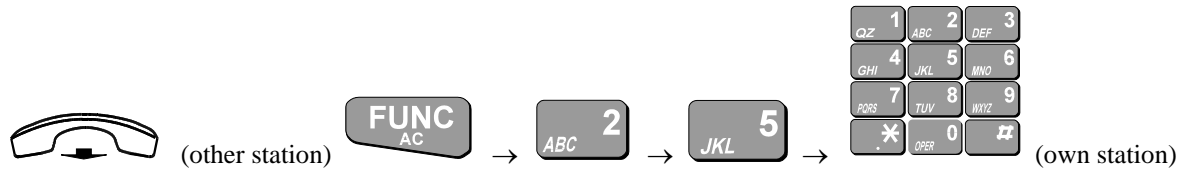


To Cancel the function:

 Repeat the above procedures, or

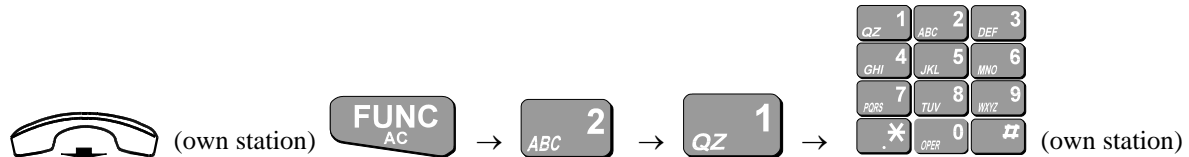


05 Call Transfer Function

 Method 1: Direct Transfer (Camp On)

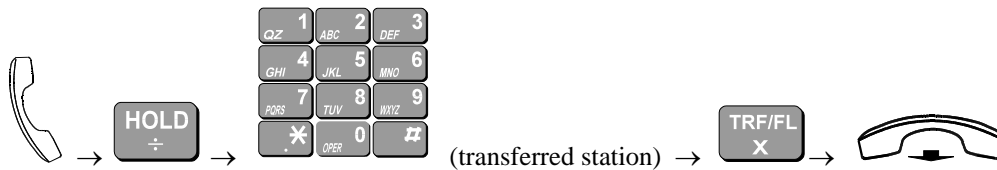


Method 2: Indirect Transfer

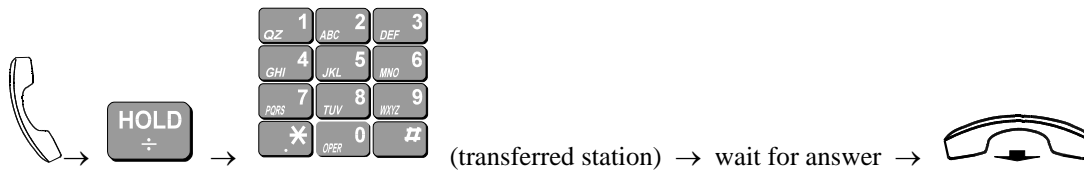 

Method 3: Quick Transfer

 By Paging



By DSS (Direct Station Selection) Key



