

5. Redial/Pause Button

If the number called is engaged, or you wish to call the same number again:

- Lift the telephone handset and listen for dial tone.
- Press **Redial** button.

Note: If you are required to dial an access code and wait for dial tone before dialling the number pressing the **Redial** button after the access code will insert an automatic 3.6 second pause for redial.

6. Ringer Volume Control

The slider control allows you to adjust the incoming ringer volume to your preferred level.


7. Care of Your Telephone

The telephone should only be cleaned with a damp cloth. Do not use aerosol polish, abrasive cleaners, or solvents.

WARNING: To avoid the risk of electrical shock do not use the telephone during an electrical storm, except during an emergency.

Aristel

**TELEPHONE
MODEL 413mw/419**

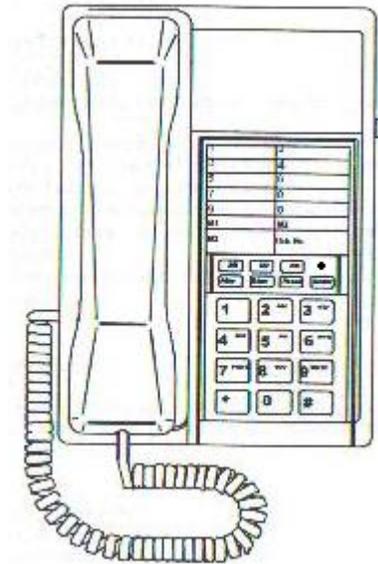

Aristel

Product of Aristel Networks Australia

ACN 095 422 450

Unit 3A, 100 Station Street


Nunawading Victoria

3131

413mw UG Issue 1 Nov 2002

USER GUIDE

MODEL 413mw TELEPHONE

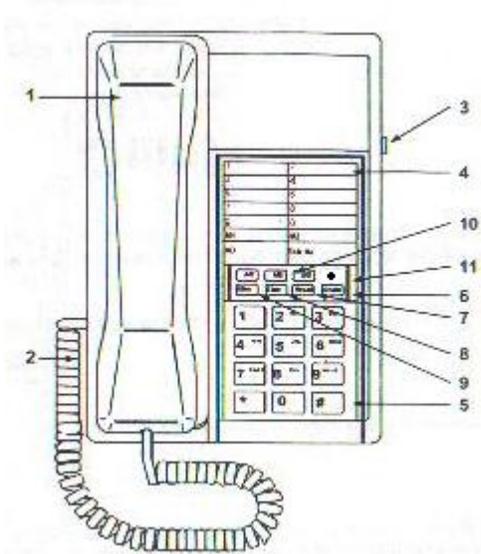

1. Handset
2. Handset Cord
3. Ringer Volume Control
4. Telephone Number Card
5. Dialing Buttons
6. Redial Button
7. Recall Button
8. Store Button
9. Mem Button
10. One Touch Mem Buttons
11. Visual Message Indicator

1. Installation

Connect the end of the handset cord (2) that has the longest straight part to the socket on the base of the telephone labelled "**H/S**" and the other end to the socket on the lower end of the handset (1). Lay the straight part of the cord in the slot provided in the base of the telephone.

Connect the line cord to the socket on the base of the telephone labelled "**LINE**" and the other end to your telephone connection socket.

2. To make a call

- Lift the telephone handset and listen for dial tone.
- Dial the telephone number required.
- After the call, replace the handset.

3. Memory Dialling

Memory dialling allows you to store three numbers under one touch memory dial buttons and up to ten frequently called numbers for abbreviated dialling.

To Store a number in Memory;

- Lift the handset
- Press the **Store** button
- Dial the number to be saved (Maximum of 16 Digits)
- Press the **Store** button
- Press a dial pad number button (0, 1, 2 or 9) or **M1**, **M2** or **M3** corresponding to the memory location that you wish to store the number in.
- Repeat the above process to store further numbers.
- Replace the handset on the telephone and record the name or number memory location on the Telephone Number Card

Note: Pressing the **Redial** button when storing a number in memory will insert an automatic 3.6 Second pause.

To dial a stored one touch dial number;

- Lift handset
- Press the corresponding button **M1**, **M2** or **M3**.

To dial a stored abbreviated dial number;

- Lift handset
- Press **Mem** button.
- Press the number button (**0, 1, 2 or 9**) corresponding to the memory location that you wish to call.

4. Recall Button

When your telephone is connected to a network or PABX which offers features such as call waiting or call transfer, the **Recall** button allows the user to access these various features. Please check your network or PABX Guide for further information.

Operation of the **Recall** button provides a 100mS Timed Loop Break.