


## Registering a new or unregistered Handset

An unregistered Handset will display “NOT SUB” on the screen  
You will need one of the provided handsets that is already registered to the base.




either or

It will display a screen similar to the example below

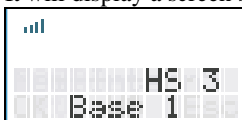

You can use any of these **pre-registered handsets** to put the base into “Handset Registration Mode” by following the steps listed below

1. On the already registered Handset press **down arrow**  until **BS setting** appears

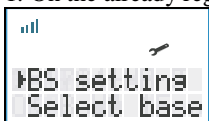

2. Press **INT/OK**

3. Enter the Master PIN (default is 1590)

4. Press **INT/OK**

5. Press **down arrow**  until **New HS** appears



6. Press **INT/OK**

7. Enter Sub PIN (default is 1590)

8. Press **INT/OK**

9. Enter the Handset number to registered

10. Press **INT/OK**


The base is now in “Handset Registration Mode”


You now have two minutes to register the **new handset**



either or

by completing the following steps

1. On the new, unregistered handset press **down arrow**  until **Register** appears

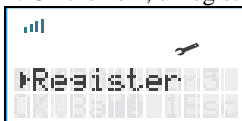

2. Select the correct base number (if only one base is installed it is base 1)

3. Handset will search for the base put in registration mode by the above steps

4. Handset will respond with a number (eg:003aa-001f0h)

5. Press **INT/OK**

6. Enter PIN (default is 1590)

7. Press **INT/OK**

8. System responds in approx. 5 Secs and Handset returns to idle state with the handset number displayed on the LCD